

## Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### Basic operation



- 1 Sound quality modes
- 2 Listening position (if equipped)
- 3 Automatic Sound Levelizer (ASL)
- 4 Audio sources
- 5 Power/Volume

### Audio sources

AM·SAT: AM radio/Satellite radio\*

FM: FM radio

DISC·AUX: CD player/Auxiliary audio device

\*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM satellite radio broadcasts. (Subscription is required. For detailed information, see the Owner's Manual.)

### Radio



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scan
  - All radio stations: press
  - Preset radio stations: press and hold
- 7 Seek

### Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ CD player

### ■ Playing an audio CD



- 1** Random playback  
Current CD: press  
All CDs: press and hold
- 2** Repeat  
Current track: press  
Current CD: press and hold
- 3** Text information
- 4** CD select
- 5** CD load
- 6** Scan  
All tracks in current disc: press  
First track of each disc: press and hold
- 7** Eject
- 8** Track select/rewind/fast-forward

### ■ Playing a CD with MP3/WMA files



- 1** Random playback  
Current file: press  
All files in current folder: press and hold
- 2** Repeat  
Current file: press  
All files in current folder: press and hold
- 3** Folder select
- 4** Text information
- 5** File select
- 6** CD select
- 7** CD load
- 8** Scan  
All files in current folder: press  
First file of each folder: press and hold
- 9** Eject



### ■ Loading a CD

- 1 Press the LOAD button.  
WAIT is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from WAIT to LOAD.

### ■ Loading multiple CDs

- 1 Press and hold the LOAD button until you hear a beep.  
WAIT is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from WAIT to LOAD.  
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To stop the operation, press the DISC-AUX button.

### ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Power on/change mode: press  
Power off: press and hold
- 2 Volume
- 3 Radio: radio tuner  
CD: CD/track/file (MP3/WMA) select

## Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



- |                                   |   |
|-----------------------------------|---|
| 1 Driver side temperature control | 7 Passenger side temperature display        |
| 2 Switch to automatic mode        | 8 Micro dust and pollen filter              |
| 3 Driver side temperature display | 9 Passenger side temperature control        |
| 4 OFF button                      | 10 Windshield defog/defrost                 |
| 5 Fan speed controls              | 11 Outside air/recirculated air mode switch |
| 6 Air flow controls               | 12 A/C switch                               |
|                                   | 13 Dual mode switch                         |

### Using the automatic mode



- 1 Press the AUTO button.
- 2 Adjust the temperature using the TEMP buttons.


### Adjusting the temperature in DUAL mode



In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the DUAL button.
- 2 Adjust the driver side temperature using the TEMP buttons, and the passenger side temperature using the PASSENGER TEMP buttons.

## Ashtrays

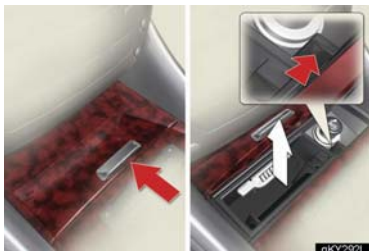

### ► Front

To remove the ashtray, push the release lever.



### ► Rear


To remove the ashtray, press down on the plate and lift the ashtray out.

## Seat Heaters / Seat Heaters and Ventilators (If Equipped)



### ► Seat heaters

Turn the dial toward **1**.

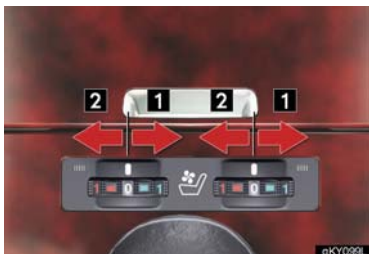

### ► Seat heaters and ventilators

Seat heaters: turn the dial toward **1**.


Ventilators: turn the dial toward **2**.

## Console Boxes




### ► Front

To open, slide and lift the armrest with the knob pulled up.

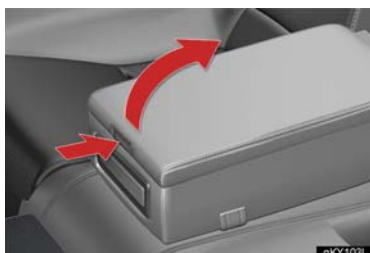

### ► Rear (if equipped)

To open, press the lock release button and lift the armrest.

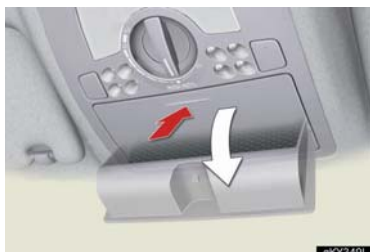

### ► Overhead console

To open, press the lid.

There is a power outlet located in the front console box.



Entering and Exiting

Before Driving

When Driving

Rain and  
Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing  
Your Lexus

## Glove Box

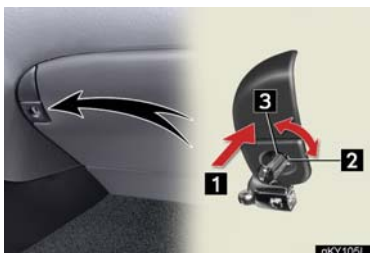

**1** Open: press the button.

**2** Lock

**3** Unlock


The glove box can be locked and unlocked using the mechanical key.

## Cup Holders




### ► Front (type A)

To open, press down on the front of the lid.

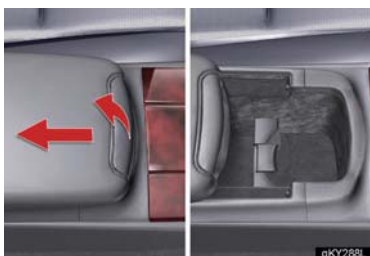

### ► Front (type B)


To open, pull and hold the knob and slide the armrest.

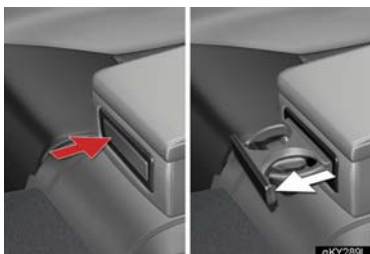

### ► Rear

To open, press in and release.

## Interior Lights

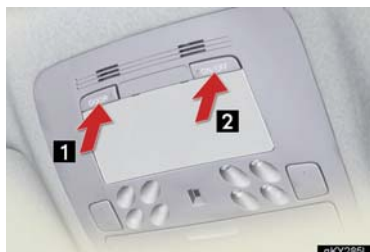

### ► Without moon roof

- 1 Door position ON/OFF
- 2 ON/OFF



### ► With moon roof

- 1 Door position ON/OFF
- 2 ON/OFF

## Rear Sunshade (If Equipped)



To raise the rear sunshade, press the switch.  
Press the switch again to lower it.

The sunshade automatically lowers to ensure visibility when reversing.

## Compass



To display the compass, press and hold the AUTO button for 3 or more seconds.

To cancel the display, press and hold the AUTO button again for 3 or more seconds.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Extended Trunk

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Open the inside trunk door from the trunk and load baggage or other items.

## Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.